

PHRASEMAKER KEY STANDARD FONT

TO PRINT THIS CHARACTER		USE THIS POSITION	NOTES
AAAAAAAAA	<	NNNNNNNN	Use this key to set letters for spelling words with your Phrase Maker.
BBBBBBBBB	<	OOOOOOOO	
CCCCCCCCC	<	PPPPPPPP	
DDDDDDDDD	<	QQQQQQQQ	
EEEEEEEEEE	<	RRRRRRRR	
FFFFFFFFF	<	SSSSSSSS	
GGGGGGGGG	<	TTTTTTTT	
HHHHHHHHH	<	UUUUUUUU	
IIIIIIIII	<	VVVVVVVV	
JJJJJJJJJ	<	WWWWWWW	
KKKKKKKKK	<	XXXXXXXXX	Pull the black knob outward and turn to change letters.
LLLLLLLLL	<	YYYYYYYY	
MMMMMMMMM	<	ZZZZZZZZ	
NNNNNNNN	<	AAAAAAAAA	
OOOOOOOO	<	BBBBBBBBB	
PPPPPPPP	<	CCCCCCCCC	
QQQQQQQQ	<	DDDDDDDDD	
RRRRRRRR	<	EEEEEEEEEE	
SSSSSSSS	<	FFFFFFFFF	
TTTTTTTT	<	GGGGGGGG	
UUUUUUUU	<	HHHHHHHH	Look for the letter in the window opening at the top of the Phrase Maker.
VVVVVVVV	<	IIIIIIIII	
WWWWWWW	<	JJJJJJJJJ	
XXXXXXXXX	<	KKKKKKKK	
YYYYYYYY	<	LLLLLLLLL	
ZZZZZZZZ	<	MMMMMMMMM	

To make a blank space, turn knob to the yellow spacer character.

around the block